


# Configuration initiale de l'imprimante INTERMEC PD41 via le logiciel PrintSet

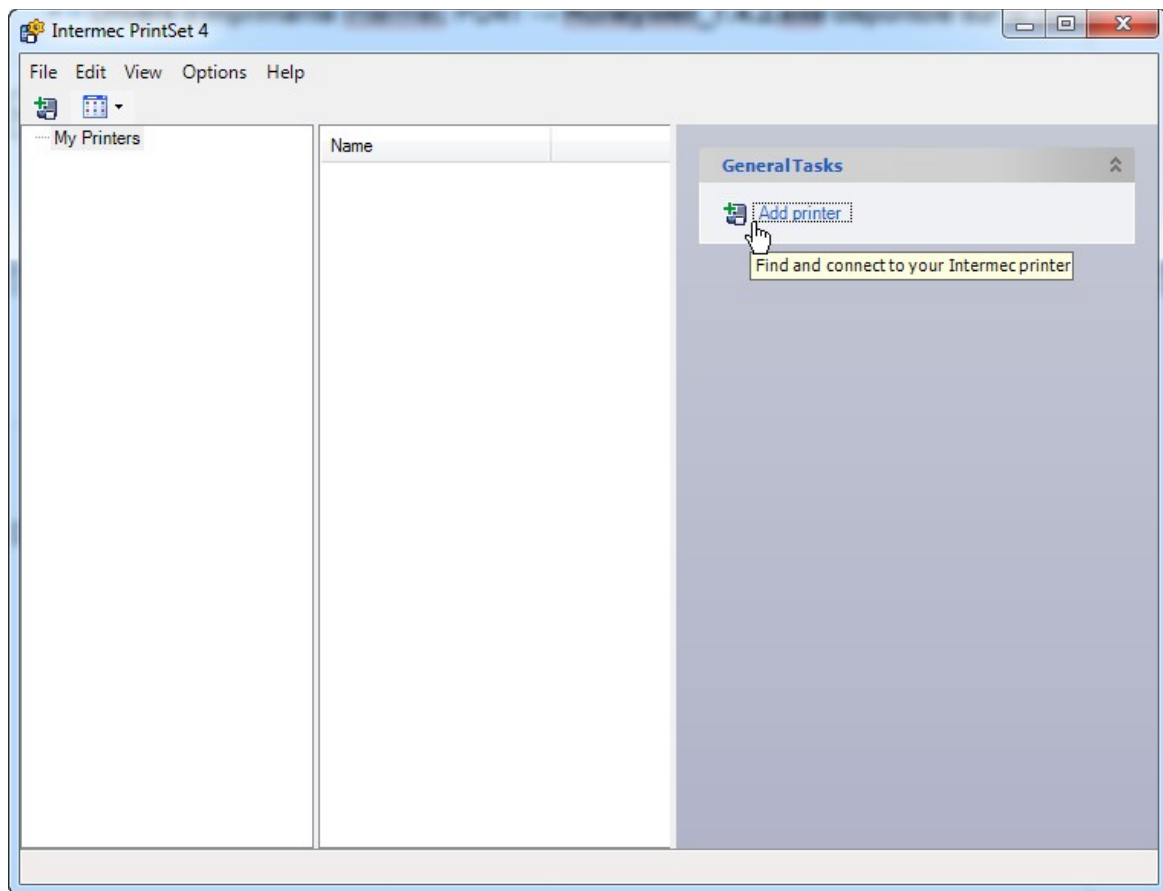

**Add Printer Wizard**

**Connection Type**  
Select how your printer is connected.

☐ Network  
Your printer is or will be connected to the network. If it is not configured for the network, you will be guided through the process.

☒ **Serial**  
Your printer is connected locally to your PC using a serial cable.

☐ USB  
Your printer is connected locally to your PC using a USB cable.

☐ Disconnected  
Your printer is not available now, but you want to preconfigure it and connect it later.

< Back   Next >   Cancel

**Add Printer Wizard**

**Serial Communication Parameters**  
Enter the serial communication parameters for your printer.

COM Port: COM1: (Active) ▼

☒ Automatically detect communication parameters

Baud rate: 9600 ▼

Data bits: 8 ▼

Parity: none ▼

Stop bits: 1 ▼

< Back   Next >   Cancel

**Choisir le port série du PC sur lequel est reliée l'imprimante**

